

NexCap (RAM TRX) High Cap Installation Guide(Step two)

Overall Display



NexCap (RAM TRX) High Cap Installation Accessories Material Sheet

Accessory Kit Code	Product Code	Product Picture	Product Name	Product Quantity
L	1		EPDM Foam	3 roll (1.8m/roll)
M	1		European standard 30M8 slider nut	4
N	1		Truck canopy front & rear connector	4
	2		Truck canopy middle connector	2
	3		Metal washer	6
	4		Hexagon socket round head screw M8X20	12
O	1		Flat washer	16
	2		Hexagon socket round head screw M8X16	12
	3		Hexagon socket round head screw M8X10	4

NexCap (RAM TRX) High Cap Installation Steps

Step 1

Attach the **EPDM foam** to the side edges and tail of the truck canopy according to the method shown in Figure ①. Note: Do not install it onto the existing rubber strip.

The used accessory kit

Attachment photos

Accessory kit L



Figure①

EPDM Foam



Step 2

Insert the **European standard 30M8 slider nuts** into the profile slots at the bottom of the truck canopy according to Figure ②. Insert two nuts on each side (left and right), then move them to the middle part of the profile for later use.

The used accessory kit


Attachment photos

Accessory kit M



Figure②

European standard 30M8 slider nut

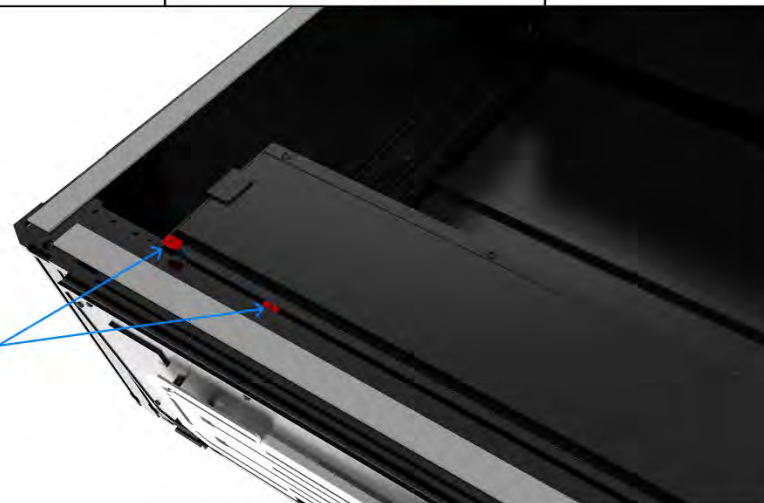

NexCap (RAM TRX) High Cap Installation Steps

Step 3

According to the method shown in Figure ③, use the **truck canopy connectors** and **metal washers** together with the **hexagon socket round head screws M8X20** to fasten them at the slot of the truck bed. (Do not tighten them for the time being.) (Pay attention to the orientation of the front and rear connectors.) The front and rear brackets should be connected to the base.

The used accessory kit

Attachment
photos

Accessory kit N



Figure③




Front installation demonstration



Middle installation demonstration



Rear installation demonstration

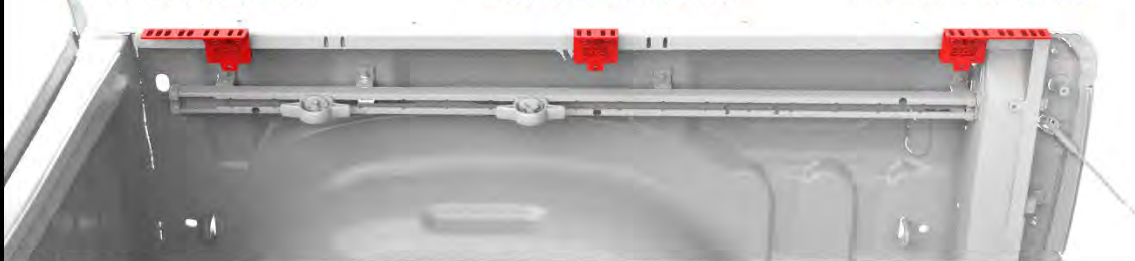

Step 4

According to Figure ④, place the truck canopy on the truck bed. Use the **hexagon socket round head screws** together with **flat washers** to fix the truck canopy onto the truck canopy connectors. (May need to operate inside the truck bed; stay safe.) Tighten all screws, check the structural strength, and then it is ready for safe use.

The used accessory kit

Attachment
photos

Accessory kit O




Figure④

Hexagon socket round head
screw M8X16

Hexagon socket round head
screw M8X10

Hexagon socket round head
screw M8X16

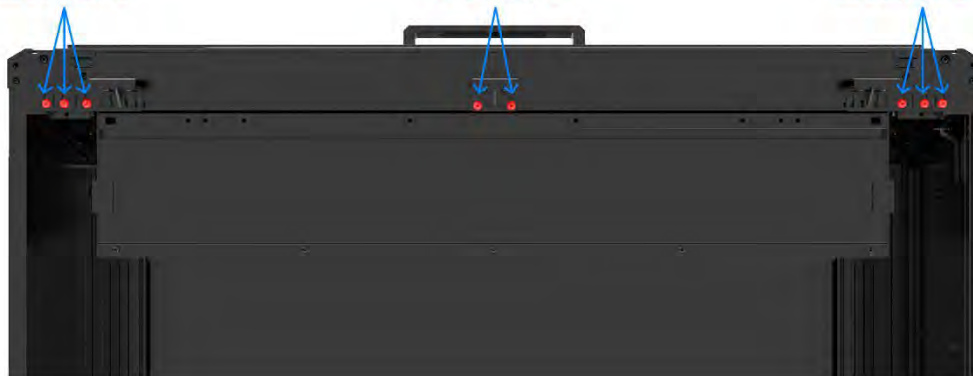

The truck bed is hidden in the figure.